 


Hose Handle (Bent End Piece, BEP)

INSTALLATION INSTRUCTIONS

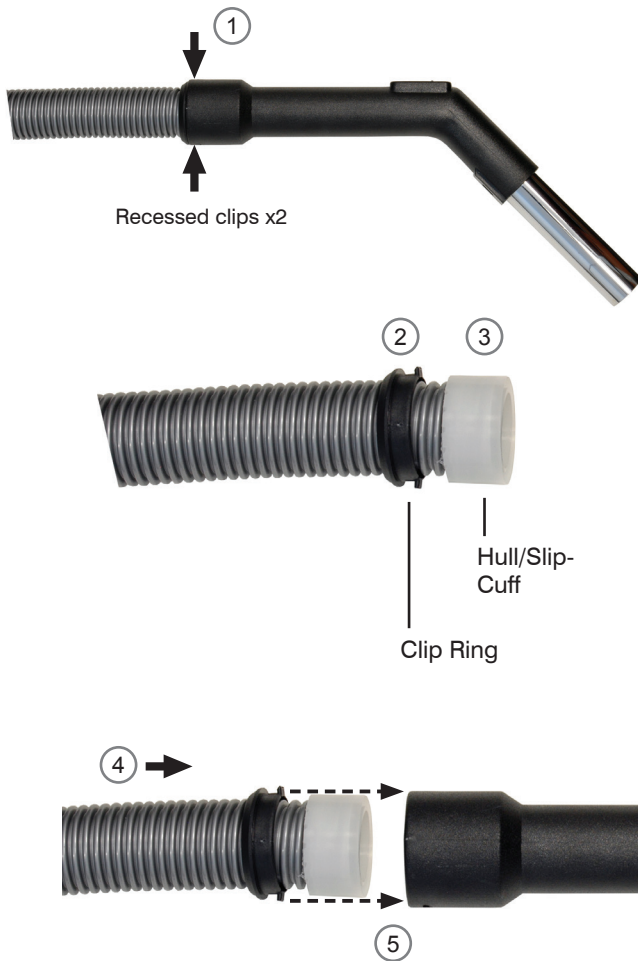

1. Remove the existing handle from your vacuum hose by detaching the clip ring at the rear of the handle.
Press the two recessed clips with a small screwdriver to release the clip ring.

Unscrew the old hull (clockwise).

If the old hull is in good condition you should be able to use it with the new handle as long as the old clip ring fits the new handle. If you decide to use the new hull but the old hull is glued to the hose, see the cutting note below.

2. Slide the new clip ring over the end of the hose oriented as shown.


3. Screw the new hull onto the hose.
Left-hand thread, screws on anti-clockwise.

Before screwing the hull into position, a small amount of contact adhesive glue applied about 10mm from the end of the hose will ensure that the hull will not gradually unscrew from the hose during normal use. (This step is optional).

4. Slide the end of the hose (fitted with the hull) into the rear of the new handle.

5. Push the clip ring against the rear of the handle and snap the two clips in place.

Your new hose handle is now ready for use.

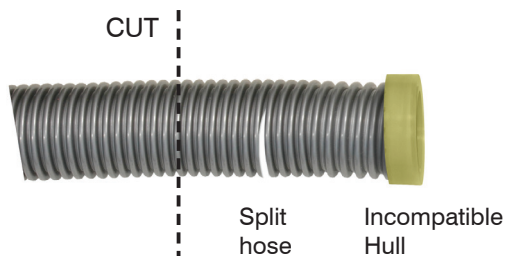

Hose Cutting. If your existing hull is not compatible with new handle, the hull is damaged or if the hose is split (near the handle) cut the hose behind the existing hull using a sharp bladed knife. Ensure the cut is perpendicular (not angled). Then go to step 2 above.